



***Universal Keyboard Wedge  
Programming Guide***

PSC Scanning, Inc.  
959 Terry Street  
Eugene, Oregon 97402-9120  
Telephone: (541) 683-5700  
Toll Free: (800) 547-2507  
Telefax: (541) 686-1702

PSC and the PSC logo are registered trademarks of PSC INC.

All rights reserved. No part of the contents of this documentation or the procedures described therein may be reproduced or transmitted in any form or by any means without the prior written permission of PSC Inc. Owner's of PSC Inc.'s products are hereby granted a non-exclusive, revocable license to reproduce and transmit this documentation for the purchaser's own internal business purposes. Purchaser shall not remove or alter any proprietary notices, including copyright notices, contained on this documentation and shall ensure all such notices appear on any reproductions of the documentation.

### **Disclaimer**

Reasonable measures have been taken to ensure that all information contained in this manual is complete and accurate. However, PSC reserves the right to change any specification at any time without prior notice.

# Table of Contents

Introduction .....	1
Manual Overview .....	1
Manual Contents .....	3
How to Use this Manual .....	6
How to Program Your Scanner .....	8
If You Make a Mistake... ..	11
Return to Factory Settings .....	12
Programming Manual References .....	13
Communication Modes .....	14
Keyboard Wedge Mode .....	15
Cloning Mode .....	17
PC Down/UpLoad Mode .....	20
Universal Keyboard Wedge I/f Configuration ----	23
Activating the Universal Keyboard Wedge Interface .....	25
Terminal/Keyboard Settings .....	27
Terminal/Keyboard Number Pad .....	28
End of Message Characters .....	33
Upper/Lower Case Options .....	38
Types of Numeric Characters .....	39
Intercharacter Delay .....	41
WYSE Timeout .....	44
Editing Mode .....	46

Programming Sequence .....	49
PHASE A .....	55
PHASE B1 .....	57
PHASE B2 .....	67
PHASE B3 .....	69
PHASE B4 .....	71
PHASE C0 .....	75
PHASE C1 .....	79
PHASE C2 .....	109
PHASE C3 .....	113
PHASE D .....	120
PHASE E .....	121
Activate editing mode .....	121
Match Not Performed .....	126
RS-232 .....	127
RS-232 Interface Configuration .....	127
RS-232 Restrictions .....	130
RS-232 Activation .....	131
RS-232: Baud Rate .....	132
RS-232: Parity .....	136
RS-232: Data Bits .....	138
RS-232: Stop Bits .....	139
RS-232: End of Message Characters .....	140
RS-232: Intercharacter Delay .....	144
RS-232: ACK/NAK Protocol .....	147

RS-232: Xon/Xoff Protocol .....	148
RS-232: RTS/CTS Protocol .....	149
Double RS-232 PC Term Mode – Activate .	150
RS-232 In/Out Mode – Activate .....	152
RS-232: Full ASCII Emulation .....	153
Wand Emulation Interface Configuration -----	154
Wand Emulation I/F Configuration .....	155
Wand Emulation Activation .....	156
Wand Emulation:	
Transmission Speed .....	157
Wand Emulation: Bar/Space Polarity .....	159
Wand Emulation: Idle State .....	160
Symbologies -----	161
Symbology Selection .....	162
Code 39 Options .....	170
Label Code 4/5 Options .....	185
Interleaved 2 of 5 Options .....	186
UPC/EAN Options .....	197
Codabar Options .....	217
Code 128 Options .....	220
UCC/EAN 128 Options .....	223
Standard 2 of 5 Options .....	224
MSI Options .....	226
Plessey Code Options .....	230
Telepen Code Options .....	231

Code 93 Options .....	232
Matrix 2 of 5 Options .....	233
BC412 Options .....	241
Decoding Selectivity .....	242
Symbology Leading Identifiers .....	243
Three Character AIM Identifier .....	245
Decoding Selectivity .....	246

## Appendix A

Beeper Options .....	A-1
Preamble/Postamble .....	A-5
Data Output Transmission .....	A-8
Conversion of Characters .....	A-9
Rolling Buffer Mode .....	A-15
Beep Upon "BEL" (07h) Received .....	A-21
Scanner Released by Host .....	A-22
Transmission of the Full ASCII .....	A-25
Locking access to programming .....	A-26
Displaying the firmware level .....	A-29
Appendix B Number Pad .....	B-1
Appendix C Code 39 Full ASCII Table .....	C-1
Appendix D Code 39 ASCII Extended Table .....	D-1
Appendix E Multiread Character Table .....	E-1
Appendix F Enabling Code 39 .....	F-1

# Introduction

## Manual Overview

This manual contains programmable features and information for the **Universal Keyboard Wedge interface ONLY**.

### NOTE

The Universal Keyboard Wedge interface offers a larger, more enhanced feature set than the standard Keyboard Wedge interface covered by the other programming manuals for your scanner. Make sure that you select the correct interface type (standard Keyboard Wedge or Universal Keyboard Wedge) that offers the options you require for your installation, and that you have the correct manual(s) that will allow you to program all the desired features.

## INTRODUCTION

---

### Manual Overview - continued

You will need to reference the programming guide that is specific to your scanner model in order to access and modify features other than those specific to the Universal Wedge interface. See the topic, *Programming Manual References*, later in this section for important information on other manuals you may need to use.

As previously stated, this manual contains programming and feature information for scanners equipped with PSC® Universal Keyboard Wedge interface capabilities. At the time of this writing, scanner models that offer this interface are:

VS800™

HS1250™

VS1000™

VS1200™

QuickScan™ 6000/6000 Plus

PowerScan™

QuickScan™ 1000

Duet™

SP400™



### Manual Overview - continued

Other scanners could also have the ability to use these features. Call your PSC dealer to verify if your scanner can take advantage of Universal Wedge features.

### Manual Contents

These sections are included in this manual:

- **Introduction** - If you've never programmed a scanner before, you'll want to familiarize yourself with the basics included in this section.
- **Communication Modes** - This section includes information about physical connections and cabling, using Cloning Mode to duplicate programming configuration between scanners, and also how to use a PC to down/upload software to a scanner.

### Manual Contents - continued

- **Editing Mode** - The Universal Keyboard Wedge interface also supports the scanner's ability to edit bar code label data before sending it to the host terminal. This feature allows the flexibility of character matching, defining fields, the addition of preambles/postambles, and more.
- **Wedge Programming** - This section contains programming specific to keyboard wedge features, such as return to factory defaults, selecting the specific keyboard type, "end of message" characters, numeric characters, time out between characters, and WYSE time out.
- **RS-232 Interface Configuration** - The RS-232 interface features provided in this section are an enhanced set that are only available for scanners equipped with the Universal Keyboard Wedge interface. These features include options for baud rate, parity, stop bits, "end of message" characters,

### Manual Contents - continued

intercharacter delay, ACK/NAK protocol, Xon/Xoff protocol, double RS-232 mode, and RS-232 in/out mode.

- **Wand Emulation I/F Configuration** - Like the RS-232 interface, the Wand Emulation interface features contained in this manual are a special programming set offering different options than the standard PSC Wand Emulation feature set.
- **Symbologies** - This section allows you to select and customize settings from among several bar code symbologies that are in common use today.
- **Appendices** - The appendices to this manual contain general feature settings that are common to all interfaces, such as beeper, preamble/postamble, locking access to programming, displaying the firmware level, etc. The appendices also provide handy numeric keypads, character tables, as well as the full ASCII table.

### How to Use this Manual

Each programmable feature listed in this manual is presented with a brief description of how the feature works, its selectable options, and the programming bar codes needed to select and set it.

#### **IMPORTANT**

Universal Keyboard Wedge interface programming requires the scanner to read Code 39 (C39) symbology bar codes. If your scanner was previously configured with C39 disabled, you will need to re-enable it before proceeding. See *Appendix F, Enabling Code 39*.

#### **NOTE**

In order to produce this manual at a reasonable size, many pages contain two bar codes. You will need to completely cover any bar codes you do not intend to scan (with your hand or a piece of paper) to prevent accidental mis-programming.

### Features Supported

Additionally, since not all features are available for all scanners, you'll need to reference each description to determine if your scanner model supports that particular feature. The following icons are used to indicate when your scanner supports a feature. A diagonal line through the icon signifies that the feature is not available for that model.



VS800™



VS1000™



VS1200™



HS1250™



QuickScan™ 1000



QuickScan™ 6000



PowerScan™



Duet™



SP400™ Worldwide Wedge



ALL



SP400™ RF



EXAMPLE: PowerScan™ NOT supported

# How to Program Your Scanner

To program your scanner using this manual, follow these guidelines:

1. Entering Programming Mode is done by scanning the START bar code located on the inside back cover of this manual.

### NOTE

The scanner indicates when it is in Programming Mode by continuously flashing its green LED indicator lamp.

The scanner must be in Programming Mode in order to modify any programmable features.

### How to Program Your Scanner - continued

2. Select the desired interface. This manual offers only two selections for this:
  - a) The Universal Keyboard Wedge interface (see the *Universal Keyboard Wedge Interface Configuration* section).
  - b) The RS-232 interface (see the *RS-232 Interface Configuration* section).
3. Scan the bar codes from the appropriate section (*Universal Keyboard Wedge Interface Configuration* or *RS-232 Interface Configuration*) to select options and modify features for the selected interface type.

#### NOTE

If the scanner's beeper is enabled, it will emit a "good read" beep as each bar code is read successfully.

4. After all desired programming parameters have been set, you must end the session by scanning the END bar code located on the inside back cover of this manual.

### How to Program Your Scanner - continued

#### NOTE

Upon scanning the END bar code, the scanner's green LED will then cease its continuous flashing, indicating it is no longer in Programming Mode. The scanner is now ready for normal operation.

5. If you will require the scanner to perform label editing, turn to the *Editing Mode* section and carefully follow the instructions to program this function.



### If You Make a Mistake...

If, during a programming session, you find that you are unsure of the scanner's Universal Keyboard Wedge settings or wish to re-set this configuration, use the Return to Factory Settings bar code on the next page to return all Universal Wedge parameters to their factory settings. Scanning this bar code will also reset any Universal Wedge changes made during previous programming sessions.

#### NOTE

When your scanner is first connected to a keyboard wedge host, the factory default setting (unless your scanner was custom configured) is communication with a U.S. PC/AT keyboard.

#### CAUTION

Use the FACTORY DEFAULTS bar code with caution, since it will disable/reset ALL Universal Wedge features that may have been programmed since the scanner's installation.

### Return to Factory Settings

Use the bar code below to return the scanner to the default settings configured at the factory for your scanner's original Universal Keyboard Wedge specifications. Other scanner programming (such as symbology selection and beeper settings) will not be affected.

This bar code is typically used to return the scanner to a "known good" operating state when the present programming status is not known, faulty, or suspect.

To reset Universal Wedge factory defaults, scan the bar code below.



FACTORY DEFAULTS, UNIVERSAL WEDGE

## Programming Manual References

In order to properly configure all scanner programming features for your particular application, you may need to use other additional programming manuals available from PSC®. Here are manuals that are currently available:

- R44-1020 SP400™ Programming Guide
- R44-2039 Keyboard Wedge Connectivity Guide
- R44-1140 SP\*ACE™ and VS1000™ Prog. Guide
- R44-1340 VS1200™/HS1250™ Programming Guide
- R44-1540 QuickScan™ 6000/6000 Plus Programming Guide
- R44-1740 Duet™ Programming Guide
- R44-1840 PowerScan™ Programming Guide
- R44-2018 QuickScan™ 1000 Programming Guide

Call your PSC dealer to inquire about other programming manuals that are available, or you can find copies of programming manuals and more information on the internet at **[www.pscnet.com](http://www.pscnet.com)**.

# Communication Modes

The Universal Keyboard Wedge interface offers several alternate modes to allow flexibility in communication between the scanner, its host, and even with other scanners.

These modes are:

- Keyboard Wedge Mode -- is the standard operational/ communication mode.
- Cloning Mode -- allows duplication of configuration between a source scanner and a target scanner.
- PC Down/Upload Mode -- permits downloading of parameter values from a PC to a scanner. Additionally, it enables a scanner's configuration information to be displayed and saved on a PC. Finally, it allows testing of the scanner's RS-232 transmissions to the PC.
- Editing Mode -- provides a sophisticated capability to edit input data before its transmission to the host terminal. See the following section for more information.

### Keyboard Wedge Mode

In this mode, the scanner is connected between the keyboard and the computer/host terminal (thus the term "wedge"). Scanned bar code data is processed by the scanner and emulated by the system as if it had been typed on the keyboard.

### Communication 'Y' Cable

A special 'Y' cable is used to connect the scanner between the keyboard and the computer/host terminal. If you need a cable, contact your dealer for information about cables and their availability.

#### 'Y' Cable Installation

1. Turn off power to your computer or host terminal.
2. Unplug the keyboard cable from the computer/host terminal, and plug it into the female connector of the 'Y' cable. (See Figure 1.)

## COMMUNICATION MODES

---

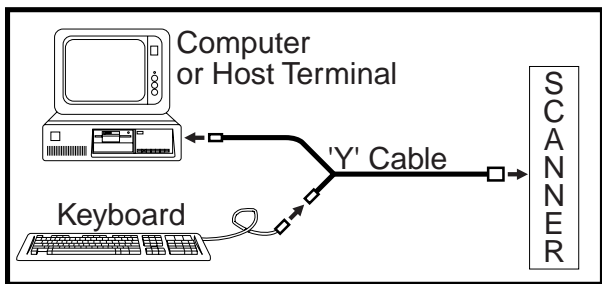


Figure 1. Connecting the 'Y' Cable

3. Plug the male keyboard connection end of the 'Y' cable into the keyboard input port of the computer/host terminal.
4. Plug the remaining end of the cable into the scanner.
5. Power on the computer/host terminal.
6. Power on the scanner. A power-up beep or a sequence of beeps (depending upon the scanner type) will be emitted.

### Cloning Mode

When a quantity of scanners must all be programmed with identical parameter settings, Cloning Mode permits quick and easy duplication of those settings from a pre-programmed *source* scanner to a *target* scanner.

To use Cloning Mode, follow these instructions:

1. Program a *source* scanner with all the settings necessary to allow full functionality with your system. Test this *source* scanner carefully to ensure that all parameters are correctly set.
2. Connect the *source* scanner to a *target* scanner using an approved cloning cable for your scanner type. If you need more information or need to obtain cables, contact your dealer.
3. Connect the *source* scanner and the *target* scanner to power.
4. Power-on both scanners.

## COMMUNICATION MODES

---

### Cloning Mode - continued

5. Scan this bar code with the *source* scanner:

ALL



TRANSMIT CONFIGURATION

6. Scan this bar code with the *target* scanner:

ALL



RECEIVE CONFIGURATION



### Cloning Mode - continued

7. Power-off the *target* scanner, and connect the next *target* scanner. Repeat steps 2 through 6.

#### NOTE

When cloning multiple scanners, it is not necessary to read the TRANSMIT CONFIGURATION bar code (step 5) each time a different *target* scanner is connected. Simply scan the RECEIVE CONFIGURATION bar code in step 6 as each target scanner is connected for cloning.

To exit Cloning Mode, power the *source* scanner off, then on.

### PC Down/UpLoad Mode

#### NOTE

This feature applies to VS/HS and SP400WW scanners ONLY.

This software is available from your dealer on a 3.5" disk (DOS compatible). It permits the functions listed below once the software is properly installed on the hard disk of a PC containing a COM 1 or COM 2 RS-232 port.

PC Down/UpLoad Mode functions are:

- **Download** – Download and set all parameter values.
- **Upload** – Display all parameter values contained in a scanner.
- **Test** – Test the RS-232 transmissions from a scanner to a PC. (This feature will not function unless the Universal Wedge RS-232 interface is enabled.)
- **Save** – Save (on a PC) a complete configuration of a scanner's parameter values.

### PC Down/UpLoad Mode - continued

PC Down/UpLoad Mode can also be a very useful tool to quickly program a quantity of scanners with the same configuration. This process takes only a few seconds per scanner.

To install and use Down/UpLoad Mode:

1. Connect an approved AC adapter to the scanner.
2. Connect the scanner to COM 1 or COM 2 of your PC using PSC cable, P/N: 6015-0486.
3. Power-on on your PC and the scanner.
4. Copy the Down/UpLoad software from the floppy disk to your PC hard disk.
5. Use the mouse or keyboard to select the function desired and follow the instructions appearing on the screen.

## COMMUNICATION MODES

---

### PC Down/UpLoad Mode - continued

6. Read the following bar code to start the transfer between the PC and the scanner.



DOWN/UPLOAD DIALOG RELEASE

#### NOTE

When the transfer is completed, the scanner will return to its normal operational mode.

# Universal Keyboard Wedge Interface Configuration

This section provides instructions and bar codes for programming Universal Keyboard Wedge parameters.

Programmable options included in this section are:

- Terminal/Keyboard Interface Selection
- End of Message Characters
- Upper/Lower Case Options
- Types of Numeric Characters
- Intercharacter Delay
- WYSE Timeout

### Programming Universal Keyboard Wedge Options

For assistance with scanner programming, follow the instructions given in Section 1 under the topic, *How to Program Your Scanner*.

If you make a mistake while programming the scanner, reference the topics, "*If You Make a Mistake...*", and "*Return to Factory Settings*" in the introductory section of this manual.

#### **CAUTION**

Use the FACTORY DEFAULTS bar code with caution, since it will disable/reset ALL Universal Wedge features that may have been programmed since the scanner's installation.

# Activating the Universal Keyboard Wedge Interface

To activate the Universal Keyboard Wedge Interface, follow these instructions:

1. Scan the START bar code located on the inside back cover of this manual.
2. Determine the I.D. of the terminal/keyboard. This information is available in the Universal Keyboard Wedge Connectivity Guide (R44-2039), or refer to the second page following this one for a listing of the most common keyboard I.D.s.
3. Scan the **ACTIVATE UNIVERSAL KEYBOARD WEDGE INTERFACE** bar code on the following page.

## Universal KBW Interface Configuration

---

### Activating the Universal KBW I/F - cont.

4. Using the "number pad" on the following pages, scan in the digits for the keyboard I.D. number you determined in step 2.
5. Scan the END bar code on the inside back cover of this manual.



ACTIVATE  
UNIVERSAL KEYBOARD WEDGE INTERFACE



### Terminal/Keyboard Settings

The list below contains the most common terminal/keyboard types. If your specific system is not listed below, consult the Keyboard Wedge Connectivity Guide (P/N R44-2039) for a detailed listing of terminal/keyboard types. A copy of the guide can be obtained from the internet at **www.pscnet.com**, or call your dealer for customer support information.

#### NOTE

The factory default communication mode setting is I.D. type 11, (PC AT, PS2).

<u>Terminal</u>	<u>Keyboard</u>
PC XT	10
PC AT, PS2	11
MAC	25

## Universal KBW Interface Configuration

---

### Terminal/Keyboard Number Pad

Enter the keyboard I.D. number corresponding to your computer or terminal by scanning the bar codes from this number pad.

ALL



1

ALL



2

## Universal KBW Interface Configuration

---

### Terminal/Keyboard Number Pad - cont.

ALL



3

ALL



4

## Universal KBW Interface Configuration

---

### Terminal/Keyboard Number Pad - cont.

ALL



5

ALL



6

## Universal KBW Interface Configuration

---

### Terminal/Keyboard Number Pad - cont.

ALL



7

ALL



8

## Universal KBW Interface Configuration

---

### Terminal/Keyboard Number Pad - cont.

ALL



9

ALL



0

### End of Message Characters

You may select one of the END OF MESSAGE CHARACTERS bar codes from the following pages to cause the scanner to emulate the selected characters at the end of each transmitted message.



END OF MESSAGE CHARACTERS = RETURN

#### NOTE

The factory default setting for this option is RETURN.

## Universal KBW Interface Configuration

---

### End of Message Characters - continued

ALL



END OF MESSAGE CHARACTERS = ENTER

ALL



END OF MESSAGE CHARACTERS = CR/LF



## Universal KBW Interface Configuration

---

### End of Message Characters - continued

ALL



END OF MESSAGE CHARACTERS  
= FIELD ADVANCE

ALL



END OF MESSAGE CHARACTERS  
= FIELD EXIT

## Universal KBW Interface Configuration

---

### End of Message Characters - continued

ALL



END OF MESSAGE CHARACTERS = TAB+

ALL



END OF MESSAGE CHARACTERS = LF

### End of Message Characters - continued

ALL



END OF MESSAGE CHARACTERS  
= NO CHARACTER

### Upper/Lower Case Options

Scan one of the two selections below to select whether characters are sent as upper or lower case.



UPPER CASE/CAPS – ENABLE

#### NOTE

The factory default setting for this option is UPPER CASE/CAPS.



LOWER CASE/SMALL – ENABLE

### Types of Numeric Characters

This function allows the scanner to emulate either the numeric characters located on top of the keyboard or those located on the numeric pad.

Use this function if trouble occurs with upper/lower case keyboard modes.



NUMERICS LOCATED OVER THE  
ALPHANUMERIC PAD

#### NOTE

This setting is enabled by default.

## Universal KBW Interface Configuration

---

### Types of Numeric Characters - continued

This function allows the scanner to emulate the numeric characters located on the numeric pad.



NUMERIC PAD

#### NOTE

If the option "NUMERIC PAD" is chosen, the numeric pad of the keyboard must be also turned on (locked) for correct operation (engage "Num Lock").

### Intercharacter Delay

Scan the bar code from this and the following pages to select the desired pause (if any) between each character before it is sent to the host. This time delay is used to control the flow of data from the scanner, but it should not be required for most applications.

ALL



INTERCHARACTER DELAY = 0 ms

ALL




INTERCHARACTER DELAY = 5 ms

## Universal KBW Interface Configuration

---

### Intercharacter Delay - continued

ALL



INTERCHARACTER DELAY = 10 ms

ALL



INTERCHARACTER DELAY = 20 ms



## Universal KBW Interface Configuration

---

### Intercharacter Delay - continued

ALL



INTERCHARACTER DELAY = 50 ms

ALL



INTERCHARACTER DELAY = 100 ms

### WYSE Timeout

To enable the WYSE timeout, follow these instructions:

1. Scan this ACCESS WYSE TIMEOUT bar code.

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



ACCESS WYSE TIMEOUT

2. Scan the digit bar codes from the Numeric Pad in Appendix B to enter the desired timeout value.

#### **IMPORTANT**

To use the Numeric Pad, your scanner must be programmed to read single-digit Code 39 bar codes. Follow the instructions at the beginning of Appendix B to program this function.

## Universal KBW Interface Configuration

---

### WYSE Timeout - continued

3. Scan this VALIDATION bar code.

<del>VS</del> 800	VS 1000	VS 1200	HS 1250	<del>QS</del> 1000	QS 6000	<del>Power</del> Scan	<del>Duet</del>	SP400 WW	SP400 RF
----------------------	------------	------------	------------	-----------------------	------------	--------------------------	-----------------	-------------	-------------



VALIDATION

# Editing Mode

Editing Mode has been designed to offer you complete flexibility to change the format of the data input message before transmission to the host system. Data will be edited when the input data meets certain criteria defined by the user (MATCH CONDITION).

### Description of Features:

- UP TO FOUR DATA OUTPUT FORMATS can be programmed by the user and activated by different match conditions.
- MATCH CONDITIONS: up to four criteria can be accumulated:
  - fixed number of characters found.
  - pre-defined characters found (up to 3).

- EIGHT EDITING FUNCTIONS can be used to fix the output data format:
  - Divide the message into separate fields (up to five).
  - Add one or two postamble characters to each field.
  - Create additional fixed fields (up to two fields with six characters maximum).
  - Set the number of fields to be transmitted.
  - Cancel fields.
  - Set the position of the fields in the message transmitted.
  - Activate or deactivate selected formats.
  - Transmit data (or not) upon no-match.

### Use of the Numeric Pad

Scanning of number digits is often required while in Programming Mode (to enter variable data). You'll find a handy Numeric Pad in Appendix B.


#### **IMPORTANT**

To use the Numeric Pad, your scanner must be programmed to read single-digit Code 39 bar codes. Follow the instructions at the beginning of Appendix B to program this function.

## Programming Sequence

1. Read the START bar code located on the inside back cover of this manual to enter Programming Mode.
2. Phase A -- START OF CONSTRUCTION. Select a format number #N (FORMAT #1-4) to construct by scanning its associated bar code.
3. Phase B -- Set up the MATCH CONDITION. Before editing data, scan the appropriate bar codes to define each of these four criteria for the input data:
  - Match with symbology (not available for all scanner models)
  - Match with number of characters
  - Match with input port
  - Match with pre-defined characters

## EDITING MODE

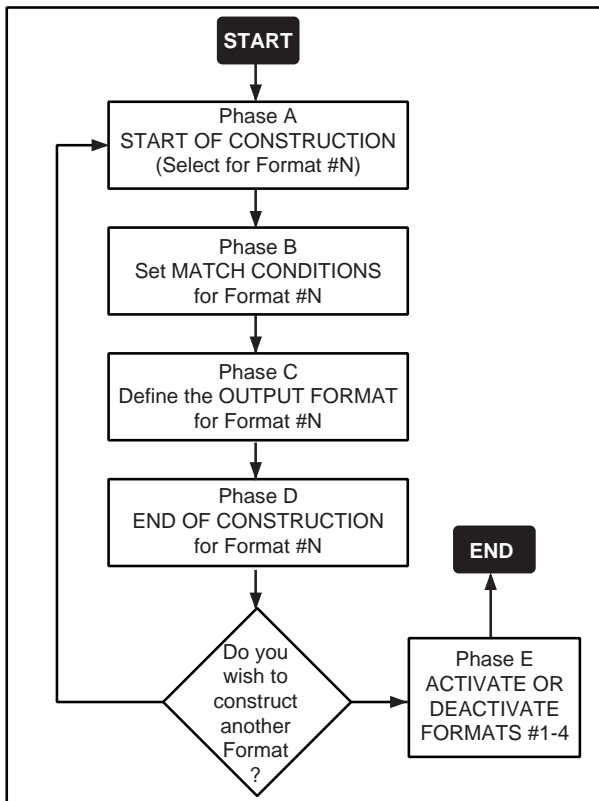



### Programming Sequence - continued

4. Phase C -- Define the OUTPUT FORMAT.  
Scan the bar codes to select options for each of the following parameters:
  - Divide the input message into fields (1-5)
  - Define the fields
  - Add (or not) 1 or 2 fixed fields
  - Set the number of fields to be transmitted
  - Cancel (or not) fields
  - Adjust the position of each field in the output message.
5. Phase D -- Scan the END OF CONSTRUCTION bar code corresponding to the format number #N (Format #1-4 selected in Phase A). If you would like to define a second format, start again at Phase A and select a second format number to program. Up to four formats can be defined.

### Programming Sequence - continued

6. Phase E -- ACTIVATE EDITING MODE.  
**Important:** Editing mode is not activated by default. You must activate or deactivate Editing Mode for each of the format numbers desired. This allows you to retain format definitions while not actively using them.
7. Read the END bar code located on the inside back cover to exit Programming Mode and save the new parameters.

## Programming Example

input data received: 123ABC456 (Code 39 label) output data desired: CODE: C456 <TAB> REF: 123 <CR>
---

### **READ THE BAR CODE "START"**

**PHASE A:** Read the bar code "START OF CONSTRUCTION  
FORMAT # 1"

**PHASE B:** Define the MATCH CONDITION using these  
three criteria

- 9 data characters
- received on all ports
- pre-defined char.: ABC in position 4

**PHASE C:** Next, prepare this phase on paper as follows:

<u>1 2 3</u>	<u>A B</u>	<u>C 4 5 6</u>
field # 1	field # 2	field # 3

Then program Phase C

- Divide the message into 3 fields

define field # 1 with 3 char. and CR as postamble	define field # 2 with 2 char. and no postamble	define field # 3 with 4 char. and TAB as postamble
---	--	--

## EDITING MODE

---

### Programaming Example (continued)

#### PHASE C: continued

— Construct the two additional fixed fields:

fix field # 1: CODE:

fix field # 2: REF:

— Set the number of fields to be transmitted: 4

— Adjust the positions of the fields and cancel field # 2 by acting as follows:

**1** ACCESS

**2** ADD. FIELD # 1

**3** FIELD # 3

**4** ADD. FIELD # 2

**5** FIELD # 1

**6** VALIDATION

**Note:** The positions of the fields in the output message are fixed by the reading sequence. Fields are cancelled when not read in the sequence.

#### PHASE D:

Read the code “END OF CONSTRUCTION -  
FORMAT # 1”

#### PHASE E:

Activate Editing mode on format # 1

#### READ THE BAR CODE “END”

## PHASE A

### START OF CONSTRUCTION OF NUMBER SELECTED

Up to 4 different output data formats can be constructed:

- Select a number and use the labels in Phases A - D to adjust its parameters, then come back to this phase to adjust another format if required.

ALL



FORMAT # 1: START OF CONSTRUCTION

ALL



FORMAT # 2: START OF CONSTRUCTION

PHASE A - continued

ALL



FORMAT # 3: START OF CONSTRUCTION

ALL



FORMAT # 4: START OF CONSTRUCTION

# PHASE B1

## ENABLING SYMBOLOGIES

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



NEW SELECTION

(Enables the scanner to accept all symbologies.)

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



CODE 39

## EDITING MODE

---

### PHASE B1 - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



INTERLEAVED 2 OF 5

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



UPC/EAN



PHASE B1 - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



MAG. STRIPE DATA

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



MONARCH/CODABAR

## EDITING MODE

---

### PHASE B1 - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



CODE 128

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



EAN 128

PHASE B1 - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



STANDARD 2 OF 5

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



MSI CODE

## EDITING MODE

---

PHASE B1 - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



PLESSEY

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



TELEPEN

PHASE B1 - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



CODE 93

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



MATRIX 2 OF 5

## EDITING MODE

---

### PHASE B1 - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



IATA

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



BC412

### IMPORTANT

Use of this symbology requires specific firmware. Consult your dealer if you need to implement BC412.

PHASE B1 - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



PHARMACODE

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



3W7

## EDITING MODE

---

### PHASE B1 - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



RESERVED #1

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



RESERVED #2





## EDITING MODE

---

PHASE B2 - continued  
MATCH WITH THE NUMBER  
OF CHARACTERS

Action 3:

ALL



VALIDATION

If no match is desired with the number of characters, scan the bar code below.

ALL



VARIABLE NUMBER ACCEPTED

## PHASE B3

MATCH WITH INPUT PORT

ALL



ALL PORTS

ALL



PORT J1

## EDITING MODE

---

PHASE B3 - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



RS-232 DATA RECEIVED ON J1 or C2

## PHASE B4

### MATCH WITH PRE-DEFINED CHARACTERS

If no match is required for pre-defined characters, scan the bar code below.



### NO MATCH REQUIRED FOR PRE-DEFINED CHARACTERS

Up to three characters can be defined. They can be located anywhere in the input message, but must be side by side.

**Action 1:** Read only one of the following three codes.



### MATCH WITH 1 CHARACTER

---

## EDITING MODE

---

### PHASE B4 - continued

#### MATCH WITH PRE-DEFINED CHARACTERS

##### Action 1: (Continued)



MATCH WITH 2 CHARACTERS



MATCH WITH 3 CHARACTERS

PHASE B4 - continued

MATCH WITH PRE-DEFINED CHARACTERS

**Action 2:** Pre-define the characters (s) desired by scanning the corresponding characters from the **Code 39 FULL ASCII TABLE** in Appendix C.

**Action 3:**



VALIDATION

## EDITING MODE

---

### PHASE B4 - continued

#### POSITION OF THE FIRST PRE-DEFINED CHARACTER IN THE INPUT MESSAGE

##### Action 1:



ACCESS

**Action 2:** Enter the position desired using the  
NUMBER PAD located in Appendix B.

##### Action 3:



VALIDATION



## PHASE C0

### DIVIDE THE INPUT MESSAGE INTO FIELDS

Before starting this phase, it is advisable to prepare it on paper.

- Write down the input message and separate it into fields.
- Mark each field with a number from 1 to 5 maximum starting at the left hand side of the message.
- Enter the number of fields resulting from the division of the input message including the fields which do not require transmission.
- Define each necessary field using the Phase C1 selections.

## EDITING MODE

---

PHASE C0- continued

DIVIDE THE INPUT  
MESSAGE INTO FIELDS

ALL



ONLY ONE FIELD

ALL



2 FIELDS

PHASE C0- continued

DIVIDE THE INPUT  
MESSAGE INTO FIELDS

ALL



3 FIELDS

ALL



4 FIELDS

## EDITING MODE

---

PHASE C0- continued

DIVIDE THE INPUT  
MESSAGE INTO FIELDS



5 FIELDS


# PHASE C1

## DEFINE FIELD #1

WITH A FIXED NUMBER OF CHARACTERS

### Action 1:

ALL



ACCESS

### Action 2:

Enter the number of characters using the  
NUMBER PAD located in Appendix B.

### Action 3:

ALL



VALIDATION

## EDITING MODE

---

PHASE C1 - continued

DEFINE FIELD #1

WITH A LEADING SEPARATOR CHARACTER

IF AVAILABLE IN THE MESSAGE

**Action 1:**

ALL



ACCESS

**Action 2:**

Enter the value of the separator characters using the CODE 39 FULL ASCII TABLE in Appendix C.

**Action 3:**

ALL



VALIDATION

PHASE C1 - continued

DEFINE FIELD #1

SEPARATOR TRANSMITTED OR NOT IN THE  
OUTPUT MESSAGE

ALL



TRANSMITTED

ALL



NOT TRANSMITTED

## EDITING MODE

---

PHASE C1 - continued

DEFINE FIELD #1

THIS FIELD IS THE LAST VARIABLE FIELD

ALL



YES



PHASE C1 - continued

DEFINE FIELD #1

ADD (OR NOT) ONE OR TWO POSTAMBLE  
CHARACTERS TO THIS FIELD

**Action 1:**

ALL



ACCESS TO A 1ST POSTAMBLE CHARACTER

**Action 2:**

Enter the value of this postamble character using  
the CODE 39 FULL ASCII TABLE in Appendix C.  
(Scan DEL to cancel.)

**Action 3:**

ALL



VALIDATION

## EDITING MODE

---

PHASE C1 - continued

DEFINE FIELD #1

ADD (OR NOT) ONE OR TWO POSTAMBLE  
CHARACTERS TO THIS FIELD

**Action 1:**

ALL



ACCESS TO A 2ND POSTAMBLE CHARACTER

**Action 2:**

Enter the value of this postamble character using  
the CODE 39 FULL ASCII TABLE in Appendix C.  
(Scan DEL to cancel.)

**Action 3:**

ALL



VALIDATION

PHASE C1 - continued

DEFINE FIELD #2

WITH A FIXED NUMBER OF CHARACTERS

**Action 1:**



ACCESS

**Action 2:**

Enter the number of characters using the  
NUMBER PAD located in Appendix B.

**Action 3:**



VALIDATION

## EDITING MODE

---

PHASE C1 - continued

DEFINE FIELD #2

WITH LEADING SEPARATOR CHARACTERS

IF AVAILABLE IN THE MESSAGE

**Action 1:**

ALL



ACCESS

**Action 2:**

Enter the value of the separator characters using the CODE 39 FULL ASCII TABLE in Appendix C.

**Action 3:**

ALL



VALIDATION

PHASE C1 - continued

DEFINE FIELD #2

SEPARATOR TRANSMITTED OR NOT IN THE  
OUTPUT MESSAGE

ALL



TRANSMITTED

ALL



NOT TRANSMITTED

## EDITING MODE

---

PHASE C1 - continued

DEFINE FIELD #2

THIS FIELD IS THE LAST VARIABLE FIELD

ALL



YES

PHASE C1 - continued

DEFINE FIELD #2

ADD (OR NOT) ONE OR TWO POSTAMBLE  
CHARACTERS TO THIS FIELD

**Action 1:**

ALL



ACCESS TO A FIRST POSTAMBLE CHARACTER

**Action 2:**

Enter the value of these postamble characters  
using the CODE 39 FULL ASCII TABLE in Appen-  
dix C. (Scan DEL to cancel.)

**Action 3:**

ALL



VALIDATION

## EDITING MODE

---

PHASE C1 - continued

DEFINE FIELD #2

ADD (OR NOT) ONE OR TWO POSTAMBLE  
CHARACTERS TO THIS FIELD

**Action 1:**



ACCESS TO A SECOND  
POSTAMBLE CHARACTER

**Action 2:**

Enter the value of this postamble character using the  
CODE 39 FULL ASCII TABLE in Appendix C. (Scan DEL  
to cancel.)

**Action 3:**



VALIDATION



PHASE C1 - continued

DEFINE FIELD #3

WITH A FIXED NUMBER OF CHARACTERS

**Action 1:**



ACCESS

**Action 2:**

Enter the number of characters using the  
NUMBER PAD located in Appendix B.

**Action 3:**



VALIDATION

## EDITING MODE

---

PHASE C1 - continued

DEFINE FIELD #3

WITH LEADING SEPARATOR CHARACTERS

IF AVAILABLE IN THE MESSAGE

**Action 1:**

ALL



ACCESS

**Action 2:**

Enter the value of the separator character(s) using the CODE 39 FULL ASCII TABLE in Appendix C.

**Action 3:**

ALL



VALIDATION

PHASE C1 - continued

DEFINE FIELD #3

SEPARATOR TRANSMITTED OR NOT IN THE  
OUTPUT MESSAGE

ALL



TRANSMITTED

ALL



NOT TRANSMITTED

## EDITING MODE

---

PHASE C1 - continued

DEFINE FIELD #3

THIS IS THE LAST VARIABLE FIELD

ALL



YES

PHASE C1 - continued

DEFINE FIELD #3

ADD (OR NOT) ONE OR TWO POSTAMBLE  
CHARACTERS TO THIS FIELD

**Action 1:**

ALL



ACCESS TO A FIRST POSTAMBLE CHARACTER

**Action 2:**

Enter the value of this postamble character using  
the CODE 39 FULL ASCII TABLE in Appendix C.  
(Scan DEL to cancel.)

**Action 3:**

ALL



VALIDATION

## EDITING MODE

---

PHASE C1 - continued

DEFINE FIELD #3

ADD (OR NOT) ONE OR TWO POSTAMBLE  
CHARACTERS TO THIS FIELD

**Action 1:**



ACCESS TO A 2ND POSTAMBLE CHARACTER

**Action 2:**

Enter the value of this postamble character using  
the CODE 39 FULL ASCII TABLE in Appendix C.  
(Scan DEL to cancel.)

**Action 3:**



VALIDATION

PHASE C1 - continued

DEFINE FIELD #4

WITH A FIXED NUMBER OF CHARACTERS

**Action 1:**



ACCESS

**Action 2:**

Enter the number of characters using the  
NUMBER PAD located in Appendix B.

**Action 3:**



VALIDATION

## EDITING MODE

---

PHASE C1 - continued

DEFINE FIELD #4

WITH A LEADING SEPARATOR CHARACTER IF  
AVAILABLE IN THE MESSAGE

**Action 1:**

ALL



ACCESS

**Action 2:**

Enter the value of the separator character using  
the CODE 39 FULL ASCII TABLE in Appendix C.

**Action 3:**

ALL



VALIDATION



PHASE C1 - continued

DEFINE FIELD #4

SEPARATOR TRANSMITTED OR NOT IN THE  
OUTPUT MESSAGE

ALL



TRANSMITTED

ALL



NOT TRANSMITTED

## EDITING MODE

---

PHASE C1 - continued

DEFINE FIELD #4

THIS FIELD IS THE LAST VARIABLE FIELD

ALL



YES

PHASE C1 - continued

DEFINE FIELD #4

ADD (OR NOT) ONE OR TWO POSTAMBLE  
CHARACTERS TO THIS FIELD

**Action 1:**



ACCESS TO A FIRST POSTAMBLE CHARACTER

**Action 2:**

Enter the value of this postamble character using  
the CODE 39 FULL ASCII TABLE in Appendix C.  
(Scan DEL to cancel.)

**Action 3:**



VALIDATION

## EDITING MODE

---

PHASE C1 - continued

DEFINE FIELD #4

ADD (OR NOT) ONE OR TWO POSTAMBLE  
CHARACTERS TO THIS FIELD

**Action 1:**

ALL



ACCESS TO A SECOND POSTAMBLE CHARACTER

**Action 2:**

Enter the value of this postamble character using  
the CODE 39 FULL ASCII TABLE in Appendix C.  
(Scan DEL to cancel.)

**Action 3:**

ALL



VALIDATION

PHASE C1 - continued

DEFINE FIELD #5

WITH A FIXED NUMBER OF CHARACTERS

**Action 1:**

ALL



ACCESS

**Action 2:**

Enter the number of characters using the  
NUMBER PAD located in Appendix B.

**Action 3:**

ALL



VALIDATION

## EDITING MODE

---

PHASE C1 - continued

DEFINE FIELD #5

WITH A LEADING SEPARATOR CHARACTER

IF AVAILABLE IN THE MESSAGE

**Action 1:**

ALL



ACCESS

**Action 2:**

Enter the value of the separator character using the CODE 39 FULL ASCII TABLE in Appendix C.

**Action 3:**

ALL



VALIDATION

PHASE C1 - continued

DEFINE FIELD #5

SEPARATOR TRANSMITTED OR NOT  
IN THE OUTPUT MESSAGE

ALL



TRANSMITTED

ALL



NOT TRANSMITTED

## EDITING MODE

---

PHASE C1 - continued

DEFINE FIELD #5

THIS FIELD IS THE LAST VARIABLE FIELD

ALL



YES



PHASE C1 - continued

DEFINE FIELD #5

ADD (OR NOT) ONE OR TWO POSTAMBLE  
CHARACTERS TO THIS FIELD

**Action 1:**



ACCESS TO A FIRST POSTAMBLE CHARACTER

**Action 2:**

Enter the value of this postamble character using  
the CODE 39 FULL ASCII TABLE in Appendix C.  
(Scan DEL to cancel.)

**Action 3:**



VALIDATION

## EDITING MODE

---

PHASE C1 - continued

DEFINE FIELD #5

ADD (OR NOT) ONE OR TWO POSTAMBLE  
CHARACTERS TO THIS FIELD

**Action 1:**

ALL



ACCESS TO A SECOND POSTAMBLE CHARACTER

**Action 2:**

Enter the value of this postamble character using  
the CODE 39 FULL ASCII TABLE in Appendix C.  
(Scan DEL to cancel.)

**Action 3:**

ALL



VALIDATION

PHASE C2  
ADD (OR NOT) UP TO TWO FIXED  
FIELDS

CONSTRUCTION OF ADDITIONAL FIXED FIELD  
#1

ALL



FIXED FIELD # 1 CLEARED

## EDITING MODE

---

PHASE C2 - continued

add (or not) up to two fixed fields

construction of additional field #1

### Action 1:



ACCESS TO BUFFER OF FIXED FIELD # 1

### Action 2:

Enter up to six characters using the CODE 39  
FULL ASCII TABLE in Appendix C.

### Action 3:



VALIDATION

PHASE C2 - continued  
add (or not) up to two fixed fields  
construction of additional field #2

ALL



FIXED FIELD # 2 CLEARED

## EDITING MODE

---

### PHASE C2 - continued

Add (or not) up to two fixed fields  
construction of additional field #2

#### Action 1:



ACCESS TO BUFFER OF FIXED FIELD # 2

#### Action 2:

Enter up to six characters using the CODE 39  
FULL ASCII TABLE in Appendix C.

#### Action 3:



VALIDATION

PHASE C3  
Adjust the format of the  
output message

NUMBER OF FIELDS TO BE TRANSMITTED

**Action 1:**



ACCESS

**Action 2:**

Enter the number of fields to be transmitted in the output message using the NUMBER PAD located in Appendix B.

**Action 3:**



VALIDATION

### PHASE C3 - continued

Adjust the format of the output message

FIELD POSITION AND CANCELLATION



ACCESS

#### NOTE

The order that you read these programming bar codes will fix the position of the fields in the output message. If you do not scan the bar code for a particular field, that field will be cancelled.



PHASE C3 - continued

Adjust the format of the output message

FIELD POSITIONS AND CANCELLATION

ALL



FIELD # 1

ALL



FIELD # 2

NOTE

The order that you read these programming bar codes will fix the position of the fields in the output message. If you do not scan the bar code for a particular field, that field will be cancelled.

## EDITING MODE

---

### PHASE C3 - continued

Adjust the format of the output message

#### FIELD POSITIONS AND CANCELLATION



FIELD # 3



FIELD # 4

#### NOTE

The order that you read these programming bar codes will fix the position of the fields in the output message. If you do not scan the bar code for a particular field, that field will be cancelled.

PHASE C3 - continued

Adjust the format of the output message

FIELD POSITIONS AND CANCELLATION



FIELD # 5



ADDITIONAL FIXED FIELD # 1

NOTE

The order that you read these programming bar codes will fix the position of the fields in the output message. If you do not scan the bar code for a particular field, that field will be cancelled.

## EDITING MODE

---

PHASE C3 - continued

Adjust the format of the output message

FIELD POSITIONS AND CANCELLATION



ADDITIONAL FIXED FIELD # 2

### NOTE

The order that you read these programming bar codes will fix the position of the fields in the output message. If you do not scan the bar code for a particular field, that field will be cancelled.

PHASE C3 - continued

Adjust the format of the output message

FIELD POSITIONS AND CANCELLATION



NOTE

Once this sequence is completed,  
go to Phase D on the following page  
and scan in the End of Construction  
of Format # 1-4.

### PHASE D

End of construction



END OF CONSTRUCTION, FORMATS # 1 – 4

#### IMPORTANT NOTE

Once this phase is completed for a format number:

- Go back to Phase A to define another format if required.
- Or go to the next section to activate Editing Mode for the format number(s) desired.

## PHASE E

### Activate editing mode

#### IMPORTANT NOTE

Editing mode is not activated by default. You must activate or deactivate Editing Mode for each of the format numbers desired using these bar codes. This allows you to retain format definitions while not actively using them.

Once programmed, the different formats can be activated or deactivated at any time during operation. When a format is deactivated, its parameters are saved in the non-volatile EEprom memory of the decoder and are recalled when the format number is re-activated.



EDITING MODE DEACTIVATED for *ALL* formats

## EDITING MODE


---

PHASE E - continued

Activate editing mode



ACTIVATED FOR FORMAT # 1



ACTIVATED FOR FORMAT # 2



PHASE E - continued  
Activate editing mode

ALL



ACTIVATED FOR FORMAT # 3

ALL



ACTIVATED FOR FORMAT # 4

## EDITING MODE

---

PHASE E - continued

Activate editing mode

ALL



DEACTIVATED FOR FORMAT # 1

ALL



DEACTIVATED FOR FORMAT # 2

PHASE E - continued  
Activate editing mode



DEACTIVATED FOR FORMAT # 3



DEACTIVATED FOR FORMAT # 4

### Match Not Performed

Two possibilities are offered when a match is not performed on the input data:

- Data is transmitted to the host system in its original format.



STRAIGHT-THRU TRANSMISSION  
OF THE INPUT DATA

- Data is cleared and not transmitted.



NO TRANSMISSION OF THE INPUT DATA

# RS-232 Interface Configuration

The following pages provide instructions to configure RS-232 interface communications options for scanners equipped with the Universal Keyboard Wedge Interface.

### NOTE

The RS-232 interface features provided in this section are an enhanced set that are only available for scanners equipped with the Universal Keyboard Wedge interface.

### RS-232 Interface Configuration

The programming bar codes in this section pertain only to POS terminals with an RS-232 communication interface. In order for the POS terminal and scanner to communicate, the scanner's configuration must match the communication settings of the POS terminal.

### RS-232 Interface Configuration - cont.

RS-232 Interface communication options are:

- Baud Rate
- Parity
- Data Bits
- Stop Bits
- End of Message Characters
- Timeout Between Characters
- ACK/NAK Protocol
- Xon/Xoff Protocol
- RTS/CTS Protocol
- Double RS-232 Mode
- In/Out Mode
- Intercharacter Delay
- Full ASCII Emulation

### RS-232 Restrictions

#### NOTE

The RS-232 interface must first be selected (reference the following page) before you can set the RS-232 options in this section.

**Xon/Xoff** – Software flow control.

Xon (11 hex); Host ready to receive data.

Xoff (13 hex); Host busy, wedge stops transmission and waits for Xon from host.

**ACK/NAK** – Software flow control.

Decoder waits for an acknowledgement from the host.

- ACK (06 hex); message correctly received by host.
- NAK (15 hex); message incorrectly received by host.



### RS-232 Activation

Scan this bar code to activate (enable) the RS-232 interface.

ALL

(except QuickScan 6000 = TTL ONLY)



ENABLE [Universal Wedge] RS-232

### RS-232: Baud Rate

Scan the bar codes on this and the following pages to program the RS-232 baud rate to the required setting.

ALL



BAUD RATE = 300

ALL



BAUD RATE = 600

## RS-232 INTERFACE CONFIGURATION

---

### RS-232: Baud Rate - continued

ALL



BAUD RATE = 1200

ALL



BAUD RATE = 2400

## RS-232 INTERFACE CONFIGURATION

---

### RS-232: Baud Rate - continued

ALL



BAUD RATE = 4800

ALL



BAUD RATE = 9600  
(RS-232 DEFAULT)

## RS-232 INTERFACE CONFIGURATION

---

### RS-232: Baud Rate - continued

ALL



Baud Rate: 19200

ALL



Baud Rate: 38400

### RS-232: Parity

Scan the bar code on this or the following page to select the correct RS-232 parity.

ALL



PARITY = ODD

ALL



PARITY = MARK

## RS-232 INTERFACE CONFIGURATION

---

### RS-232: Parity - continued

ALL



PARITY = SPACE

ALL



PARITY = EVEN  
(RS-232 DEFAULT)

### RS-232: Data Bits

Scan the bar code from this page to select the correct RS-232 Data Bits setting.

ALL



DATA BITS = 7  
(RS-232 DEFAULT)

ALL



DATA BITS = 8



### RS-232: Stop Bits

Scan the bar code from this page to select the correct RS-232 Stop Bits setting.

ALL



STOP BITS = 1  
(RS-232 DEFAULT)

ALL




STOP BITS = 2

### RS-232: End of Message Characters

Scan the bar code from this and the following pages to select the desired End of Message Character.

ALL



END OF MESSAGE CHARACTERS = NONE

ALL



END OF MESSAGE CHARACTERS  
= SUITE (MINITEL)

### RS-232: End of Message Characters - continued

ALL



END OF MESSAGE CHARACTERS = CR

ALL



END OF MESSAGE CHARACTERS = LF

## RS-232 INTERFACE CONFIGURATION

---

RS-232: End of Message Characters -  
continued

ALL



END OF MESSAGE CHARACTERS = HT

ALL



END OF MESSAGE CHARACTERS = EOT

## RS-232 INTERFACE CONFIGURATION

---

RS-232: End of Message Characters -  
continued

ALL



END OF MESSAGE CHARACTERS = STX...ETX

ALL



END OF MESSAGE CHARACTERS = CR/LF  
(RS-232 DEFAULT)

### RS-232: Intercharacter Delay

In a case that errors are detected using high speed transmissions, a delay can be inserted between each character for better synchronization. Scan the bar code from this and the following pages to select the desired pause (if any) between each character before it is sent to the host. This time delay is used to control the flow of data from the scanner, but it should not be required for most applications.

ALL



INTERCHARACTER DELAY = 0 ms  
(RS-232 DEFAULT)

## RS-232 INTERFACE CONFIGURATION

---

RS-232: Intercharacter Delay - continued

ALL



INTERCHARACTER DELAY = 10 ms

ALL



INTERCHARACTER DELAY = 20 ms

## RS-232 INTERFACE CONFIGURATION

RS-232: Intercharacter Delay - continued

ALL



INTERCHARACTER DELAY = 50 ms

ALL



INTERCHARACTER DELAY = 100 ms



### RS-232: ACK/NAK Protocol

Scan the appropriate bar code from this page to enable or disable the ACK/NAK feature.

ALL



ACK/NAK – ENABLE

ALL



ACK/NAK – DISABLE

### RS-232: Xon/Xoff Protocol

Scan the appropriate bar code from this page to enable or disable the Xon/Xoff feature.

ALL



Xon/Xoff – ENABLE

ALL



Xon/Xoff – DISABLE

### RS-232: RTS/CTS Protocol

Scan the appropriate bar code from this page to enable or disable the RTS/CTS feature.

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



RTS/CTS – ENABLE

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



RTS/CTS – DISABLE

*Features on this page are supported with cable 6015-0490.*

### Double RS-232 PC Term Mode – Activate

Some applications use several RS-232 terminals connected to a PC host system configured in PC Term mode. When a character is typed on a keyboard of a terminal, its scan code value is transmitted to the PC instead of its ASCII value. Then, upon reception, the PC sends back the corresponding ASCII character to display on the screen.

Therefore, once this mode is activated, the decoder sends the scan code value of each character read.

BB+ and BBX supports this mode using the cable 6015-0490. The BI+ also supports it while connected in Double RS-232 mode.

### Double RS-232 PC-Term Mode – Activate continued

To activate the PC-Term mode, read this bar code. It is advisable to insert a timeout of 50 ms between each character when baud rate is over 9600 baud.



#### PC-TERM RS-232 MODE – ACTIVATE

Upper/lower case characters and the type of numeric characters can be adjusted using the *Upper/Lower Case Options* bar codes contained in the *Universal KBW Interface Configuration* section of this manual.

Keyboard layout style can be selected without scanning "keyboard wedge mode activated" by using the *Terminal/Keyboard Settings Number Pad* bar codes also contained in the *Universal KBW Interface Configuration* section of this manual.

### RS-232 In/Out Mode – Activate

Scan the bar code below to  
activate the RS-232 In/Out Mode.



RS-232 IN/OUT MODE – ACTIVATE

### RS-232: Full ASCII Emulation

Once enabled, this function will convert each couple of characters from the Code 39 Full ASCII table.

ALL



RS-232 FULL ASCII MODE – ENABLE

ALL



RS-232 FULL ASCII MODE – DISABLE

# Wand Emulation Interface Configuration

The following pages provide instructions to configure Wand Emulation interface communications options for scanners equipped with the Universal Keyboard Wedge Interface.

### NOTE

The Wand Emulation interface features provided in this section are an enhanced set that are only available for scanners equipped with the Universal Keyboard Wedge interface.



### Wand Emulation I/F Configuration

The programming bar codes in this section pertain only to POS terminals with a Wand Emulation communication interface. In order for the POS terminal and scanner to communicate, the scanner's configuration must match the communication settings of the POS terminal.

Wand Emulation I/F communication options are:

- Transmission speed
- Bar/Space polarity
- Idle State

## WAND EMULATION I/F CONFIGURATION

### Wand Emulation Activation

To enable the Wand Emulation interface, first scan this bar code...




ENABLE [Universal Wedge] WAND EMULATION

...then select the symbology to be emulated using the bar codes in the Terminal/Keyboard Pad on pages 28-32.

- Code 39 emulation is ID #69 (scan 6, then 9)
- I 2 of 5 emulation is ID #68
- UPC/EAN emulation is ID #70 (only 8 or 13 character messages are accepted for this emulation.)

## Wand Emulation: Transmission Speed

ALL



TRANSMISSION SPEED = HIGH  
(WAND DEFAULT)

ALL



TRANSMISSION SPEED = MEDIUM

## WAND EMULATION I/F CONFIGURATION

Wand Emulation:  
Transmission Speed - continued

ALL



TRANSMISSION SPEED = LOW

## Wand Emulation: Bar/Space Polarity

ALL



BAR = 1, SPACE = 0  
(WAND DEFAULT)

ALL



BAR = 0, SPACE = 1

### Wand Emulation: Idle State

ALL



HIGH (+5V)  
(WAND DEFAULT)

ALL



LOW (0V)

# Symbologies

Symbology selection (bar code type) determines which symbologies the scanner will decode. Once you have determined the symbologies you wish to enable, turn to the following pages, enable those symbologies and set the data format options (e.g. check digit, start/stop characters, etc.) required by your host system for each symbology type. You must enable the symbology format options settings that are compatible with your host system.

## NOTE

If your scanner does not support symbology selection, only the factory default symbologies pre-set with standard industry requirements will be available. Contact your dealer if you are unsure about your scanner's default settings.

Be sure to test the scanner using factory settings before making any changes.

## SYMBOLOGIES

---

### Symbology Selection

The following bar codes allow you to enable the individual symbologies indicated.

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



CODE 39 ENABLE  
(DEFAULT)

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



INTERLEAVED 2 OF 5 ENABLE  
(DEFAULT)



## Symbology Selection - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



UPC/EAN ENABLE  
(DEFAULT)

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



MONARCH/CODABAR ENABLE  
(DEFAULT)

## SYMBOLOGIES

---

### Symbology Selection - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



CODE 128 ENABLE  
(DEFAULT)

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



EAN 128 ENABLE  
(DEFAULT)

## Symbology Selection - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



STANDARD 2 OF 5 ENABLE

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



MSI ENABLE

## SYMBOLOGIES

---

### Symbology Selection - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



PLESSEY ENABLE

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



TELEPEN ENABLE

## Symbology Selection - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



CODE 93 ENABLE

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



2 OF 5 MATRIX ENABLE

## SYMBOLOGIES

---

### Symbology Selection - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



IATA ENABLE

(ONLY 15, 17, 19 and 21 character bar codes)

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



BC412 ENABLE

(Requires a special PROM)

## Symbology Selection - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



3W7 ENABLE

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



LABEL CODE 4/5 ENABLE

## Code 39 Options

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



STANDARD CODE 39 ENABLE  
(DEFAULT)

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



FULL ASCII CODE 39 ENABLE



Code 39 Options -- continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



FULL ASCII EXTENDED - DISABLE  
(DEFAULT)

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



FULL ASCII EXTENDED -  
Active on 2 Characters preceded by a dash.

## SYMBOLOGIES

---

### Code 39 Options -- continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



FULL ASCII EXTENDED -  
Active on 2 Characters.

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



FULL ASCII EXTENDED -  
Active ONLY on 2 Characters separate from the  
symbol.

## Code 39 Options -- continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



EMULATE FUNCTION KEYS - ENABLE

Once enabled, this function will convert each couple of characters from the Code 39 FULL ASCII EXTENDED table.

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



EMULATE FUNCTION KEYS - DISABLE

## SYMBOLOGIES

---

### Code 39 Options -- continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



FULL ASCII EMULATION - DISABLE

Once enabled, this function will convert each couple of characters from the Code 39 FULL ASCII table for support of F1 - F10 and more.

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



FULL ASCII EMULATION - ENABLE

Code 39 Options -- continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



START/STOP TRANSMITTED

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



START/STOP NOT TRANSMITTED

### Code 39 Options -- continued

The multi-read function permits the temporary storage of one or more codes in the decoder's memory which will then be transmitted in a single string message.

To operate the multi-read function, the desired group of codes to be first stored must have a multi-read character as the leading character. This character can be chosen in the multi-read table in Appendix E after scanning the MULTI-READ ENABLED bar code (default is SPACE character). The transmission will start once a code having no multi-read character is read.

## Code 39 Options -- continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



MULTI-READ ENABLED

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



MULTI-READ DISABLED  
(DEFAULT)

## SYMBOLOGIES

---

### Code 39 Options -- continued

In the case of high-level security applications, a check character can be integrated as the last character in the code and verified before transmission.

<del>VS</del> 800	<del>VS</del> 1000	<del>VS</del> 1200	<del>HS</del> 1250	QS 1000	QS 6000	<del>Power</del> <del>Scan</del>	<del>Duet</del>	SP400 WW	SP400 RF
----------------------	-----------------------	-----------------------	-----------------------	------------	------------	-------------------------------------	-----------------	-------------	-------------



MODULO 43 CHECK CHARACTER  
NOT VERIFIED



Code 39 Options -- continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



MODULO 43 CHECK CHARACTER  
VERIFIED AND TRANSMITTED

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



MODULO 43 CHECK CHARACTER  
VERIFIED AND NOT TRANSMITTED

## SYMBOLOGIES

---

### Code 39 Options -- continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



PHARMACODE OR PHARMA 32/39  
NEW SELECTION

#### NOTE

The NEW SELECTION bar code must be scanned prior to scanning the PHARMACODE ENABLE bar code.

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



PHARMACODE ENABLE

Code 39 Options -- continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



PHARMACODE OR PHARMA 32/39  
START/STOP TRANSMITTED

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



PHARMACODE OR PHARMA 32/39  
START/STOP NOT TRANSMITTED  
(DEFAULT)

## SYMBOLOGIES

---

### Code 39 Options -- continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



PHARMACODE OR PHARMA 32/39  
CHECK DIGIT TRANSMITTED  
(DEFAULT)

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



PHARMACODE OR PHARMA 32/39  
CHECK DIGIT NOT TRANSMITTED

## Code 39 Options -- continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



CIP CODE 39 ENABLED  
w/CHECK DIGIT TRANSMITTED

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



CIP CODE 39 ENABLED  
w/CHECK DIGIT NOT TRANSMITTED

## SYMBOLOGIES

---

### Code 39 Options -- continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



CIP CODE 39  
(ALL CODES 39)  
(DEFAULT)

## Label Code 4/5 Options

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



CONVERT ON

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



CONVERT OFF

## SYMBOLOLOGIES

---

### Interleaved 2 of 5 Options

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



EVEN NUMBER OF CHARACTERS  
(DEFAULT)

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



ODD NUMBER OF CHARACTERS



### Interleaved 2 of 5 Options - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



CODE LENGTH = ONE LENGTH FIXED AFTER  
THE FIRST READ  
(DEFAULT)

Fixed length(s) authorized and set upon first reading(s) after power-on.

#### NOTE

In this mode, the code lengths are  
not saved after power-off.

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



CODE LENGTH = TWO LENGTHS FIXED AFTER  
THE FIRST TWO READS

## SYMBOLOGIES

---

Interleaved 2 of 5 Options - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



CODE LENGTH = THREE LENGTHS FIXED  
AFTER THE FIRST THREE READS

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



CODE LENGTH = FOUR LENGTHS FIXED  
AFTER THE FIRST FOUR READS

## Interleaved 2 of 5 Options - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



NUMBER OF FIXED LENGTHS = 1

Fixed length(s) authorized and set up using the numeric pad in Appendix B.

### NOTE

In this mode, the code lengths are saved after power-off.

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



NUMBER OF FIXED LENGTHS = 2

## SYMBOLOLOGIES

---

Interleaved 2 of 5 Options - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



NUMBER OF FIXED LENGTHS = 3

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



NUMBER OF FIXED LENGTHS = 4

### Interleaved 2 of 5 Options - continued

<b>VS</b> 800	<b>VS</b> 1000	<b>VS</b> 1200	<b>HS</b> 1250	<b>QS</b> 1000	<b>QS</b> 6000	<b>Power</b> <b>Scan</b>	<b>Duet</b>	<b>SP400</b> <b>WW</b>	<b>SP400</b> <b>RF</b>
------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-----------------------------	-------------	---------------------------	---------------------------



LENGTH OF 1st FIXED LENGTH BAR CODE

<b>VS</b> 800	<b>VS</b> 1000	<b>VS</b> 1200	<b>HS</b> 1250	<b>QS</b> 1000	<b>QS</b> 6000	<b>Power</b> <b>Scan</b>	<b>Duet</b>	<b>SP400</b> <b>WW</b>	<b>SP400</b> <b>RF</b>
------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-----------------------------	-------------	---------------------------	---------------------------



LENGTH OF 2nd FIXED LENGTH BAR CODE

## SYMBOLOGIES

---

Interleaved 2 of 5 Options - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



LENGTH OF 3rd FIXED LENGTH BAR CODE

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



LENGTH OF 4th FIXED LENGTH BAR CODE

### Interleaved 2 of 5 Options - continued

Enter the desired fixed length(s) using the numeric pad in Appendix B, then scan the VALIDATION bar code below.

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



VALIDATION

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



VARIABLE LENGTHS ENABLED

## SYMBOLOGIES

---

Interleaved 2 of 5 Options - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



CHECK DIGIT  
VERIFIED AND TRANSMITTED

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



CHECK DIGIT  
VERIFIED BUT NOT TRANSMITTED



## SYMBOLOGIES

---

Interleaved 2 of 5 Options - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



CIP CHECK DIGIT  
VERIFIED AND TRANSMITTED

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



CIP CHECK DIGIT  
VERIFIED BUT NOT TRANSMITTED

## SYMBOLOGIES

---

Interleaved 2 of 5 Options - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



CHECK DIGIT NOT VERIFIED  
(DEFAULT)

### WARNING

This mode is not advised. Missing characters can occur in the case of incomplete scanning of a bar code.

## UPC/EAN Options

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



ALL UPC/EAN CODES AUTHORIZED  
(DEFAULT)

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



EAN 13 AUTHORIZED

## SYMBOLOGIES

---

### UPC/EAN Options - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



UPC-A AUTHORIZED

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



EAN 8 AUTHORIZED

## UPC/EAN Options - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



UPC-E AUTHORIZED

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



TRANSMIT UPC AS EAN  
(DEFAULT)

## SYMBOLOGIES

---

### UPC/EAN Options - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



TRANSMIT UPC AS UPC

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



TRANSMIT UPC-E AS UPC-E  
(DEFAULT)

## UPC/EAN Options - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



TRANSMIT UPC-E AS UPC-A

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



TRANSMIT ADDON

## SYMBOLOGIES

---

### UPC/EAN Options - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



DON'T TRANSMIT ADDON  
(DEFAULT)

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



ADDON OPTIONAL  
(DEFAULT)



## UPC/EAN Options - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



ADDON REQUIRED

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



2 OR 5 CHARACTER ADDON  
(DEFAULT)

## SYMBOLOGIES

---

### UPC/EAN Options - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



2 CHARACTER ADDON ONLY

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



5 CHARACTER ADDON ONLY

## UPC/EAN Options - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



EAN 13 ADDON (378 OR 379 PREFIX)  
ENABLED

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



EAN 13 ADDON (378 OR 379 PREFIX)  
DISABLED  
(DEFAULT)

## SYMBOLOGIES

---

### UPC/EAN Options - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



TRANSMIT PREFIXES

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



DON'T TRANSMIT PREFIXES  
(DEFAULT)

UPC/EAN Options - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



TRANSMIT EAN 13 FLAG  
(DEFAULT)

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



DON'T TRANSMIT EAN 13 FLAG

## SYMBOLOGIES

---

### UPC/EAN Options - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



TRANSMIT EAN 8 FLAG  
(DEFAULT)

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



DON'T TRANSMIT EAN 8 FLAG

## UPC/EAN Options - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



TRANSMIT UPC-A FLAG  
(DEFAULT)

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



DON'T TRANSMIT UPC-A FLAG

## SYMBOLOGIES

---

### UPC/EAN Options - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



TRANSMIT UPC-E FLAG  
(DEFAULT)

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



DON'T TRANSMIT UPC-E FLAG



## UPC/EAN Options - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



TRANSMIT EAN 13 CHECK DIGIT  
(DEFAULT)

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



DON'T TRANSMIT EAN 13 CHECK DIGIT

## SYMBOLOGIES

---

### UPC/EAN Options - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



TRANSMIT UPC-A CHECK DIGIT  
(DEFAULT)

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



DON'T TRANSMIT UPC-A CHECK DIGIT

UPC/EAN Options - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



TRANSMIT EAN 8 CHECK DIGIT  
(DEFAULT)

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



DON'T TRANSMIT EAN 8 CHECK DIGIT

## SYMBOLOGIES

---

### UPC/EAN Options - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



TRANSMIT UPC-E CHECK DIGIT  
(DEFAULT)

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



DON'T TRANSMIT UPC-E CHECK DIGIT

## UPC/EAN Options - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



TRANSMIT ALL CHARACTERS  
(DEFAULT)

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



TRANSMIT PRODUCT CODE ONLY

## SYMBOLOGIES

---

### UPC/EAN Options - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



CONVERT UPC/EAN to ISBN

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



TRANSMIT UPC/EAN as UPC/EAN  
(DEFAULT)

## Codabar Options

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



TRANSMIT START/STOP CHARACTERS

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



DON'T TRANSMIT START/STOP CHARACTERS  
(DEFAULT)

## SYMBOLOGIES

---

### Codabar Options - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



abcd (small) START/STOP CHARACTERS  
ENABLE  
(DEFAULT)

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



ABCD (CAPS) START/STOP CHARACTERS  
ENABLE



## Codabar Options - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



CONCATENATION OF TWO BAR CODES  
ENABLE

(bar code 1 must end with the character 'd' and  
bar code 2 must start with the character 'd')  
(DEFAULT)

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



STANDARD

## SYMBOLOGIES

---

### Code 128 Options

<del>VS</del> 800	<del>VS</del> 1000	<del>VS</del> 1200	<del>HS</del> 1250	QS 1000	QS 6000	<del>Power</del> <del>Scan</del>	<del>Duet</del>	SP400 WW	<del>SP400</del> <del>RF</del>
----------------------	-----------------------	-----------------------	-----------------------	------------	------------	-------------------------------------	-----------------	-------------	-----------------------------------



CHECK CHARACTER VERIFIED  
AND TRANSMITTED

<del>VS</del> 800	<del>VS</del> 1000	<del>VS</del> 1200	<del>HS</del> 1250	QS 1000	QS 6000	<del>Power</del> <del>Scan</del>	<del>Duet</del>	SP400 WW	<del>SP400</del> <del>RF</del>
----------------------	-----------------------	-----------------------	-----------------------	------------	------------	-------------------------------------	-----------------	-------------	-----------------------------------



CHECK CHARACTER VERIFIED  
BUT NOT TRANSMITTED  
(DEFAULT)

Code 128 Options - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



CHECK CHARACTER NOT VERIFIED  
BUT TRANSMITTED

## SYMBOLOGIES

---

### Code 128 Options - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



FUNCTION CODE 2 (FNC2)  
ENABLED

This function permits the temporary storage of a code in the decoder if this code starts with the FNC 2 character. The message buffered will be concatenated and transmitted with the next code having no FNC 2 character.

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



FUNCTION CODE 2 (FNC2)  
DISABLED  
(DEFAULT)

## UCC/EAN 128 Options

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



TRANSMIT FUNCTION CODE 1 (FNC1)  
ENABLED

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



TRANSMIT FUNCTION CODE 1 (FNC1)  
DISABLED  
(DEFAULT)

## SYMBOLOGIES

---

### Standard 2 of 5 Options

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



NUMBER OF LENGTHS AUTHORIZED = 1  
(DEFAULT)

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



NUMBER OF LENGTHS AUTHORIZED = 2

## Standard 2 of 5 Options - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



START/STOP CHARACTER TYPE = 2 BARS

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



START/STOP CHARACTER TYPE = 3 BARS  
(DEFAULT)

### MSI Options

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



VARIABLE LENGTH BAR CODES  
ENABLE  
(DEFAULT)

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



ENABLE ONE FIXED LENGTH SET BY  
READING A BAR CODE AFTER POWER-ON  
NOTE

Length is not saved after power-off.



## MSI Options - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



DOUBLE CHECK DIGIT (Modulo 10)  
VERIFIED AND BOTH TRANSMITTED

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



DOUBLE CHECK DIGIT (Modulo 10)  
VERIFIED BUT NOT TRANSMITTED  
(DEFAULT)

## SYMBOLOGIES

---

### MSI Options - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



DOUBLE CHECK DIGIT (Modulo 10)  
BOTH VERIFIED  
BUT ONLY THE FIRST ONE TRANSMITTED

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



DOUBLE CHECK DIGIT NOT VERIFIED

MSI Options - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



SINGLE CHECK DIGIT (Modulo 10)  
VERIFIED AND TRANSMITTED

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



SINGLE CHECK DIGIT (Modulo 10)  
VERIFIED BUT NOT TRANSMITTED

## Plessey Code Options

<del>VS</del> 800	<del>VS</del> 1000	<del>VS</del> 1200	<del>HS</del> 1250	QS 1000	QS 6000	<del>Power</del> <del>Scan</del>	<del>Duet</del>	SP400 WW	<del>SP400</del> RF
----------------------	-----------------------	-----------------------	-----------------------	------------	------------	-------------------------------------	-----------------	-------------	------------------------



TRANSMIT CHECK DIGITS  
(DEFAULT)

<del>VS</del> 800	<del>VS</del> 1000	<del>VS</del> 1200	<del>HS</del> 1250	QS 1000	QS 6000	<del>Power</del> <del>Scan</del>	<del>Duet</del>	SP400 WW	<del>SP400</del> RF
----------------------	-----------------------	-----------------------	-----------------------	------------	------------	-------------------------------------	-----------------	-------------	------------------------



DON'T TRANSMIT CHECK DIGITS

## Telepen Code Options

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



ALPHANUMERIC CHARACTERS  
ENABLE  
(DEFAULT)

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



NUMERIC CHARACTERS ONLY  
ENABLE

### Code 93 Options

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



MULTIREAD ENABLED  
(DEFAULT)

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



MULTIREAD DISABLED

(Multiread permits the decoder to concatenate bar codes that start with a space character. These will be transmitted upon reading a bar code having no leading space character.)

## Matrix 2 of 5 Options

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



START/STOP CHARACTER TYPE = 2 BARS

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------

START/STOP CHARACTER TYPE = 3 BARS  
(DEFAULT)

## SYMBOLOGIES

---

### Matrix 2 of 5 Options - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



CHECK DIGIT VERIFIED AND TRANSMITTED  
(DEFAULT)

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



CHECK DIGIT VERIFIED  
BUT NOT TRANSMITTED



## Matrix 2 of 5 Options - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



CHECK DIGIT NOT VERIFIED

## SYMBOLOGIES

---

### Matrix 2 of 5 Options - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



VARIABLE LENGTH BAR CODES  
ENABLE  
(DEFAULT)

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



FIXED LENGTH BAR CODES  
ENABLE

Matrix 2 of 5 Options - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



FIRST BAR CODE LENGTH SELECTED

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



FIRST BAR CODE LENGTH ACCESS CODE

NOTE

Use the numeric pad in Appendix B to set the code length, then scan the VALIDATION bar code on the next page.

## SYMBOLOGIES

---

### Matrix 2 of 5 Options - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



VALIDATION

Matrix 2 of 5 Options - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



SECOND BAR CODE LENGTH SELECTED

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



SECOND BAR CODE LENGTH ACCESS CODE

NOTE

Use the numeric pad in Appendix B to set the code length, then scan the VALIDATION bar code on the next page.

## SYMBOLOGIES

---

### Matrix 2 of 5 Options - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



VALIDATION

## BC412 Options

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



TRANSMIT CHECK DIGIT

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------

DON'T TRANSMIT CHECK DIGIT  
(DEFAULT)

## Decoding Selectivity

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



MINIMUM SELECTIVITY  
(One bar code, one decode)

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



MAXIMUM SELECTIVITY  
(Three bar code captures, three decodes)



VS8	VS10	VS12	HS	QS1	QS6	PS	DU	SP4	SP4RF
-----	------	------	----	-----	-----	----	----	-----	-------

## Symbology Leading Identifiers

Symbology-specific label identifiers comprise one or two ASCII characters that can precede or follow bar code label data as it is transmitted to the host. The host uses these characters to distinguish between symbologies.

Industry standards have been established for symbology-specific label identifiers, and are listed in the table below. Most scanners will have factory default identifiers preset to these standards.

Programming of label identifiers for some products will require use of additional manuals. Refer to page 13.

## SYMBOLOGIES

---

### Symbology Leading Identifiers - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



DON'T TRANSMIT LEADING ID'S W/ONE CHARACTER

#### List of Identifiers

Code 39	A	Code 93	G
Interleaved 2 of 5	I	Matrix 2 of 5	Q
UPC/EAN	E	IATA	T
Codabar	F	3W7	X
Code 128	C	Pharmacode	S
EAN 128	J	Reserved # 1	V
Standard 2 of 5	R	Reserved # 2	W
MSI Code	M	Reserved # 3	Y
Plessey Code	P	RS232 data received	Z
Telepen Code	B	Mag. stripe data	D

Table 1. Industry Standard Label Identifiers (all are prefixes)

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



TRANSMIT LEADING ID'S W/ONE CHARACTER

## Three Character AIM Identifier

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



TRANSMIT  
IDENTIFIER WITH THREE CHARACTERS

The first character is ] (5Dhex), the second identifies the type of symbology read, and the third indicates an option in the symbology. Refer to the AIM standard.

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



DON'T TRANSMIT  
IDENTIFIER WITH THREE CHARACTERS  
(DEFAULT)

## Decoding Selectivity

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



MINIMUM SELECTIVITY  
(One bar code capture, one decode)  
(DEFAULT)

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



MAXIMUM SELECTIVITY  
(Three bar code captures, three decode)

# Appendix A


## Misc. Features

### Contents

BEEPER OPTIONS .....	A-2
PREAMBLE/POSTAMBLE .....	A-6
CONVERSION OF CHARACTERS .....	A-9
ROLLING BUFFER MODE .....	A-15
BEEP UPON "BEL" (07H) RECEIVED .....	A-21
SCANNER RELEASED BY HOST .....	A-22
TRANSMISSION OF THE FULL ASCII .....	A-25
LOCKING ACCESS TO PROGRAMMING .....	A-26
DISPLAYING THE FIRMWARE LEVEL .....	A-30

## Beeper Options

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



HIGH SOUND VOLUME  
(DEFAULT)

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



MEDIUM SOUND VOLUME

## Beeper Options - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



LOW SOUND VOLUME

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



SOUND VOLUME OFF

## APPENDIX A

---

### Beeper Options - continued

<del>VS</del> 800	<del>VS</del> 1000	<del>VS</del> 1200	<del>HS</del> 1250	QS 1000	QS 6000	<del>Power</del> <del>Scan</del>	<del>Duet</del>	SP400 WW	SP400 RF
----------------------	-----------------------	-----------------------	-----------------------	------------	------------	-------------------------------------	-----------------	-------------	-------------



LONG (120ms) BEEP DURATION  
(DEFAULT)

<del>VS</del> 800	<del>VS</del> 1000	<del>VS</del> 1200	<del>HS</del> 1250	QS 1000	QS 6000	<del>Power</del> <del>Scan</del>	<del>Duet</del>	SP400 WW	SP400 RF
----------------------	-----------------------	-----------------------	-----------------------	------------	------------	-------------------------------------	-----------------	-------------	-------------



MEDIUM (60ms) BEEP DURATION



## Beeper Options - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



SHORT (20 ms) BEEP DURATION

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



VERY SHORT (5 ms) BEEP DURATION

## Preamble/Postamble

ALL



ACCESS TO PORT J1 PREAMBLE BUFFER  
(TTL input data ONLY)

ALL



ACCESS TO PORT J1 POSTAMBLE BUFFER  
(TTL input data ONLY)

Preamble/Postamble - continued

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



ACCESS TO

PREAMBLE BUFFERS OF ALL PORTS

(Characters will be stored in ALL preamble buffers)

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



ACCESS TO

POSTAMBLE BUFFERS OF ALL PORTS

(Characters will be stored in ALL postamble buffers)

## APPENDIX A

---

### Preamble/Postamble - continued

ALL



CLEAR BUFFER PRE-SELECTED

<del>VS</del> 800	<del>VS</del> 1000	<del>VS</del> 1200	<del>HS</del> 1250	<del>QS</del> 1000	<del>QS</del> 6000	<del>Power</del> Scan	<del>Duet</del>	<del>SP400</del> WW	<del>SP400</del> RF
----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	--------------------------	-----------------	------------------------	------------------------



TRANSMIT PRE/POSTAMBLE CHARACTERS

## Conversion of Characters

ALL



### FIRST CHARACTER TO BE CONVERTED

Scan the character from the *Code 39 Full ASCII TABLE* located in Appendix C, then scan the VALIDATION bar code.

ALL



VALIDATION

### Conversion of Characters - continued

ALL



#### NEW FIRST CHARACTER DESIRED ACCESS

Scan the character from the *Code 39 Full ASCII TABLE* located in Appendix C, then scan the VALIDATION bar code.

ALL



VALIDATION

Conversion of Characters - continued

ALL



CLEAR CONVERSION OF FIRST CHARACTER

### Conversion of Characters - continued

ALL



SECOND CHARACTER TO BE CONVERTED  
ACCESS

Scan the character from the *Code 39 Full ASCII TABLE* located in Appendix C, then scan the VALIDATION bar code.

ALL



VALIDATION



Conversion of Characters - continued

ALL



NEW SECOND CHARACTER DESIRED  
ACCESS

Scan the character from the *Code 39 Full ASCII TABLE* located in Appendix C, then scan the VALIDATION bar code.

ALL



VALIDATION

### Conversion of Characters - continued

ALL



CLEAR CONVERSION OF  
SECOND CHARACTER

## Rolling Buffer Mode

In this mode, input data is stored in a buffer (up to 3K characters) and transmitted at a fixed timeout selected with this section.

ALL



NO TIMEOUT

ALL



TIMEOUT = 100 ms

### Rolling Buffer Mode - continued

ALL



TIMEOUT = 200 ms

ALL



TIMEOUT = 500 ms

## Rolling Buffer Mode - continued

ALL



TIMEOUT = 700 ms

ALL



TIMEOUT = 1 SECOND

### Rolling Buffer Mode - continued

ALL



TIMEOUT = 1.5 SECONDS

ALL



TIMEOUT = 2 SECONDS

## Rolling Buffer Mode - continued

ALL



TIMEOUT = 3 SECONDS

ALL



TIMEOUT = 5 SECONDS

### Rolling Buffer Mode - continued

ALL



TIMEOUT = 7 SECONDS

ALL



TIMEOUT = 10 SECONDS



---

## Beep Emitted Upon "BEL" (O7h) Received

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



NOT ACTIVATED

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



ACTIVATED

## APPENDIX A

---

### Scanner Released by Host

This function allows an RS-232 host to enable/disable input messages by sending programmable ASCII characters.

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



NOT ACTIVATED

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



ACTIVATED

## Scanner Released by Host - continued

<del>VS</del> 800	VS 1000	VS 1200	HS 1250	<del>QS</del> 1000	<del>QS</del> 6000	<del>Power</del> <del>Scan</del>	<del>Duet</del>	SP400 WW	SP400 RF
----------------------	------------	------------	------------	-----------------------	-----------------------	-------------------------------------	-----------------	-------------	-------------



SELECT THE "ON" CHARACTER

Scan the character from the *Code 39 Full ASCII TABLE* located in Appendix C, then scan the VALIDATION bar code.

<del>VS</del> 800	VS 1000	VS 1200	HS 1250	<del>QS</del> 1000	<del>QS</del> 6000	<del>Power</del> <del>Scan</del>	<del>Duet</del>	SP400 WW	SP400 RF
----------------------	------------	------------	------------	-----------------------	-----------------------	-------------------------------------	-----------------	-------------	-------------



VALIDATION

## APPENDIX A

---

### Scanner Released by Host - continued

<del>VS 800</del>	VS 1000	VS 1200	HS 1250	<del>QS 1000</del>	<del>QS 6000</del>	<del>Power Scan</del>	<del>Duet</del>	SP400 WW	SP400 RF
-----------------------	------------	------------	------------	------------------------	------------------------	---------------------------	-----------------	-------------	-------------



SELECT THE "OFF" CHARACTER

Scan the character from the *Code 39 Full ASCII TABLE* located in Appendix C.

<del>VS 800</del>	VS 1000	VS 1200	HS 1250	<del>QS 1000</del>	<del>QS 6000</del>	<del>Power Scan</del>	<del>Duet</del>	SP400 WW	SP400 RF
-----------------------	------------	------------	------------	------------------------	------------------------	---------------------------	-----------------	-------------	-------------



VALIDATION

## Transmission of the Full ASCII Character Set

Read the START label on the  
inside back cover.



ACTIVATED

The scanner will return to normal  
Operational Mode when all 96  
characters are transmitted.

### Lock Access to Programming

The LOCK ACCESS feature allows an administrator to control access to scanner programming.

To lock access to programming, follow this procedure:

1. Scan the START bar code on the inside back cover.
2. Scan this PROGRAMMING LOCKED bar code.



PROGRAMMING LOCKED

3. Scan the END bar code on the inside back cover.

## Lock Access to Programming - continued

To unlock access to programming, follow this procedure:

1. Scan this UNLOCK ACCESS bar code.



**UNLOCK ACCESS**

2. Scan the START bar code on the inside back cover.
3. Scan this PROGRAMMING RE-AUTHORIZED bar code.



**PROGRAMMING RE-AUTHORIZED**

4. Scan the END bar code on the inside back cover.

### Displaying the Firmware Level

Once the scanner is connected to a host system with communication parameters correctly adjusted, the level of the firmware implemented in the scanner can be displayed as follows:

1. Read the START bar code on the inside back cover.
2. Scan this DISPLAY FIRMWARE LEVEL bar code.



DISPLAY FIRMWARE LEVEL

Once the DISPLAY FIRMWARE LEVEL bar code is read, the firmware level is transmitted and the decoder returns to its previous operational mode.



## Displaying the Firmware Level - continued

The message will appear as follows:

**FIRMWARE LEVEL: XXX.XX**

If the SMARTY adapter is attached to the decoder, the message will include both the decoder and the smarty firmware levels as follows:

**FIRMWARE LEVEL: XXX.XX + SXX.XX**

# NOTES

# Appendix B

## Numeric Pad

The bar codes in this section provide a handy way to program numeric information into the scanner.

### NOTE

Certain scanner models have been programmed by factory default to decode Code 39 bar codes with a minimum length of two digits, and will require reprogramming to allow the scanner to read single-digit bar codes. See the following page for instructions to change Code 39 minimum length.

### Set Code 39 Minimum Length

To allow the indicated scanner models to read single-digit bar codes...

- Scan the SET C39 MINIMUM LENGTH bar code on the next page.
- Scan the C39 MINIMUM LENGTH = ONE bar code.
- Scan the END C39 MINIMUM LENGTH bar code on the second page following this page.


### Reset Code 39 Minimum Length

After you've completed programming all scanner features that required you to read single-digit bar codes, you may want to reset the scanner with a two-digit minimum length for Code 39 bar codes.

- Scan the SET C39 MINIMUM LENGTH bar code on the next page.
- Scan the C39 MINIMUM LENGTH = TWO bar code on the second page following this page.
- Scan the END C39 MINIMUM LENGTH bar code on the second page following this page.

## Set Code 39 Minimum Length

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



SET C39 MINIMUM LENGTH

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



C39 MINIMUM LENGTH = ONE

## APPENDIX B

---


### Set Code 39 Minimum Length

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



C39 MINIMUM LENGTH = TWO

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



END C39 MINIMUM LENGTH

## Numeric Pad

ALL



1

ALL



2

### Numeric Pad - continued

ALL



3

ALL



4



Numeric Pad - continued

ALL



5

ALL



6

### Numeric Pad - continued

ALL



7

ALL



8

Numeric Pad - continued

ALL



9

ALL



0

# NOTES

# Appendix C

## Code 39 Full ASCII Table

ALL



NUL

ALL



SOH

### Code 39 Full ASCII Table - continued

ALL



STX

ALL



ETX

Code 39 Full ASCII Table - continued

ALL



EOT

ALL



ENQ

### Code 39 Full ASCII Table - continued

ALL



ACK

ALL



BEL



Code 39 Full ASCII Table - continued

ALL



BS

ALL



HT

### Code 39 Full ASCII Table - continued

ALL



LF

ALL



VT

Code 39 Full ASCII Table - continued

ALL



FF

ALL



CR

### Code 39 Full ASCII Table - continued

ALL



SO

ALL



SI

Code 39 Full ASCII Table - continued

ALL



DLE

ALL



DC1

### Code 39 Full ASCII Table - continued

ALL



DC2

ALL



DC3

Code 39 Full ASCII Table - continued

ALL



DC4

ALL



NAK

### Code 39 Full ASCII Table - continued

ALL



SYN

ALL



ETB



Code 39 Full ASCII Table - continued

ALL



CAN

ALL



EM

### Code 39 Full ASCII Table - continued

ALL



SUB

ALL



ESC

Code 39 Full ASCII Table - continued

ALL



FS

ALL



GS

### Code 39 Full ASCII Table - continued

ALL



RS

ALL



US

Code 39 Full ASCII Table - continued

ALL



SP

ALL



!

## Appendix C

---

### Code 39 Full ASCII Table - continued

ALL



"

ALL



#

Code 39 Full ASCII Table - continued

ALL



\$

ALL



%

### Code 39 Full ASCII Table - continued

ALL



&

ALL



,

(closing single quote)



Code 39 Full ASCII Table - continued

ALL



(

ALL



)

## Appendix C

---

### Code 39 Full ASCII Table - continued

ALL



\*

ALL



+

Code 39 Full ASCII Table - continued

ALL



,

(Comma)

ALL



-

(Dash)

### Code 39 Full ASCII Table - continued

ALL



.  
(Period)

ALL



/

Code 39 Full ASCII Table - continued

ALL



0

ALL



1

### Code 39 Full ASCII Table - continued

ALL



2

ALL



3

Code 39 Full ASCII Table - continued

ALL



4

ALL



5

### Code 39 Full ASCII Table - continued

ALL



6

ALL



7



Code 39 Full ASCII Table - continued

ALL



8

ALL



9

### Code 39 Full ASCII Table - continued

ALL



:

(Colon)

ALL



;

(Semi-colon)

Code 39 Full ASCII Table - continued

ALL



<

ALL



=

### Code 39 Full ASCII Table - continued

ALL



>

ALL



?

Code 39 Full ASCII Table - continued

ALL



@

ALL



A

### Code 39 Full ASCII Table - continued

ALL



B

ALL



C

Code 39 Full ASCII Table - continued

ALL



D

ALL



E

### Code 39 Full ASCII Table - continued

ALL



F

ALL



G



Code 39 Full ASCII Table - continued

ALL



H

ALL



I

### Code 39 Full ASCII Table - continued

ALL



J

ALL



K

Code 39 Full ASCII Table - continued

ALL



L

ALL



M

### Code 39 Full ASCII Table - continued

ALL



N

ALL



O

Code 39 Full ASCII Table - continued

ALL



P

ALL



Q

### Code 39 Full ASCII Table - continued

ALL



R

ALL



S

Code 39 Full ASCII Table - continued

ALL



T

ALL



U

### Code 39 Full ASCII Table - continued

ALL



V

ALL



W



Code 39 Full ASCII Table - continued

ALL



X

ALL



Y

### Code 39 Full ASCII Table - continued

ALL



Z

ALL



[

Code 39 Full ASCII Table - continued

ALL



\

ALL



]

### Code 39 Full ASCII Table - continued

ALL



^

ALL



-

(Dash)

Code 39 Full ASCII Table - continued

ALL



'

(opening single quote)

ALL



a

### Code 39 Full ASCII Table - continued

ALL



b

ALL



c

Code 39 Full ASCII Table - continued

ALL



d

ALL



e

### Code 39 Full ASCII Table - continued

ALL



f

ALL



g



Code 39 Full ASCII Table - continued

ALL



h

ALL



i

### Code 39 Full ASCII Table - continued

ALL



j

ALL



k

Code 39 Full ASCII Table - continued

ALL



I

ALL



m

### Code 39 Full ASCII Table - continued

ALL



n

ALL



o

Code 39 Full ASCII Table - continued

ALL



p

ALL



q

### Code 39 Full ASCII Table - continued

ALL



r

ALL



s

Code 39 Full ASCII Table - continued

ALL



t

ALL



u

### Code 39 Full ASCII Table - continued

ALL



v

ALL



w



Code 39 Full ASCII Table - continued

ALL



x

ALL



y

## Appendix C

---

### Code 39 Full ASCII Table - continued

ALL



z

ALL



{

Code 39 Full ASCII Table - continued

ALL



|  
(Pipe Character)

ALL



}

## Appendix C

---

### Code 39 Full ASCII Table - continued

ALL



~

ALL



DEL

# Appendix D

## Code 39 ASCII

### Extended Table

ALL



FIELD EXIT

ALL



FIELD ADVANCE

## APPENDIX D

---

### Code 39 ASCII Extended Table - continued

ALL



ENTER

ALL



SEND

Code 39 ASCII Extended Table - continued

ALL



TAB

ALL



RETURN

## APPENDIX D

---

### Code 39 ASCII Extended Table - continued

ALL



RESET, RESTORE

ALL



HOME



Code 39 ASCII Extended Table - continued

ALL



RIGHT ARROW

ALL



LEFT ARROW

## APPENDIX D

---

### Code 39 ASCII Extended Table - continued

ALL



UP ARROW

ALL



DOWN ARROW

Code 39 ASCII Extended Table - continued

ALL



CLEAR

ALL



F1

## APPENDIX D

---

### Code 39 ASCII Extended Table - continued

ALL



F2

ALL



F3

Code 39 ASCII Extended Table - continued

ALL



F4

ALL



F5

## APPENDIX D

---

### Code 39 ASCII Extended Table - continued

ALL



F6

ALL



F7

Code 39 ASCII Extended Table - continued

ALL



F8

ALL



F9

## APPENDIX D

---

### Code 39 ASCII Extended Table - continued

ALL



F10

ALL



F11



Code 39 ASCII Extended Table - continued

ALL



F12

# NOTES

# Appendix E

## Multiread Character Table

ALL



Space

ALL



0

### Multiread Character Table - continued

ALL



1

ALL



2

Multiread Character Table - continued

ALL



3

ALL



4

## APPENDIX E

---

### Multiread Character Table - continued

ALL



5

ALL



6

Multiread Character Table - continued

ALL



7

ALL



8

### Multiread Character Table - continued

ALL



9

ALL



A



Multiread Character Table - continued

ALL



B

ALL



C

### Multiread Character Table - continued

ALL



D

ALL



E

Multiread Character Table - continued

ALL



F

ALL



G

### Multiread Character Table - continued

ALL



H

ALL



I

Multiread Character Table - continued

ALL



J

ALL



K

### Multiread Character Table - continued

ALL



L

ALL



M

Multiread Character Table - continued

ALL



N

ALL



O

### Multiread Character Table - continued

ALL



P

ALL



Q



## Multiread Character Table - continued

ALL



R

ALL



S

### Multiread Character Table - continued

ALL



T

ALL



U

Multiread Character Table - continued

ALL



V

ALL



W

## APPENDIX E

---

### Multiread Character Table - continued

ALL



X

ALL



Y

Multiread Character Table - continued

ALL



Z

ALL



-

## APPENDIX E

---

### Multiread Character Table - continued

ALL



.

ALL



\*

Multiread Character Table - continued

ALL



\$

ALL



/

### Multiread Character Table - continued

ALL



+

ALL



%



# Appendix F

## Enabling Code 39

Your scanner must be enabled to read the Code 39 (C39) symbology in order to read the programming bar codes in this manual.

To enable C39, follow these steps:

1. On the following pages, find the *Enable Code 39* feature for your scanner model.
2. Scan the SET/END (CODE 39 ONLY) bar code for your scanner model from that page.
3. Scan the ENABLE CODE 39 bar code for your scanner model.
4. Scan the SET/END (CODE 39 ONLY) bar code for your scanner model.
5. Your scanner should now be able to read Code 39 bar codes.

## APPENDIX F

---

### Enable Code 39

Models: VS800, VS1200,  
HS1250 and Duet

VS 800	<del>VS</del> 1000	VS 1200	HS 1250	<del>QS</del> 1000	<del>QS</del> 6000	<del>Power</del> Scan	Duet	<del>SP400</del> WW	<del>SP400</del> RF
-----------	-----------------------	------------	------------	-----------------------	-----------------------	--------------------------	------	------------------------	------------------------



SET/END (CODE 39 ONLY)

**VS800, VS1200, HS1250 and DUET models**

VS 800	<del>VS</del> 1000	VS 1200	HS 1250	<del>QS</del> 1000	<del>QS</del> 6000	<del>Power</del> Scan	Duet	<del>SP400</del> WW	<del>SP400</del> RF
-----------	-----------------------	------------	------------	-----------------------	-----------------------	--------------------------	------	------------------------	------------------------



ENABLE CODE 39

**VS800, VS1200, HS1250 and DUET models**

Enable Code 39  
 Model: VS1000

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



SET/END (CODE 39 ONLY)  
**VS1000 models**

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



ENABLE CODE 39  
**VS1000 models**

## APPENDIX F

---

### Enable Code 39

Models: QuickScan 1000, 6000, and  
6000 Plus


VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



SET/END (CODE 39 ONLY)

**QuickScan 1000, 6000, and 6000 Plus models**

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



ENABLE CODE 39

**QuickScan 1000, 6000, and 6000 Plus models**

Enable Code 39  
 Model: PowerScan

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



SET/END (CODE 39 ONLY)  
**PowerScan models**

VS 800	VS 1000	VS 1200	HS 1250	QS 1000	QS 6000	Power Scan	Duet	SP400 WW	SP400 RF
-----------	------------	------------	------------	------------	------------	---------------	------	-------------	-------------



ENABLE CODE 39  
**PowerScan models**

# NOTES

## START and END Bar Codes

The bar codes on this page are used to enter and exit Universal Keyboard Wedge Programming Mode. For more information, see the topic titled “*How to Program Your Scanner*” in the *Introduction* section of this manual.



START



END

**Asia Pacific**

PSC Hong Kong  
Hong Kong  
Telephone: [852]-2-584-6210  
Fax: [852]-2-521-0291

**Australia**

PSC Asia Pacific Pty Ltd.  
North Ryde, Australia  
Telephone: [61] 0 (2) 9878 8999  
Fax: [61] 0 (2) 9878 8688

**France**

PSC S.A.R.L.  
LES ULIS Cedex, France  
Telephone: [33].01.64.86.71.00  
Fax: [33].01.64.46.72.44

**Germany**

PSC GmbH  
Darmstadt, Germany  
Telephone: 49 (0) 61 51/93 58-0  
Fax: 49 (0) 61 51/93 58 58

**Italy**

PSC S.p.A.  
Vimercate (MI), Italy  
Telephone: [39] (0) 39/62903.1  
Fax: [39] (0) 39/6859496

**Japan**

PSC Japan K.K.  
Shinagawa-ku, Tokyo, Japan  
Telephone: 81 (0)3 3491 6761  
Fax: 81 (0)3 3491 6656

**Latin America**

PSC S.A., INC.  
Miami, Florida, USA  
Telephone: (305) 539-0111  
Fax: (305) 539-0206

**United Kingdom**

PSC Bar Code Ltd.  
Watford, England  
Telephone: 44 (0) 1923 809500  
Fax: 44 (0) 1923 809 505



[www.pscnet.com](http://www.pscnet.com)

**Corp. Headquarters**

PSC Inc.  
Portland, OR  
Telephone: (503) 553-3920  
Fax: (503) 553-3940

**PSC Inc.**

959 Terry Street  
Eugene, OR  
Telephone: (541) 683-5700  
Fax: (541) 345-7140



R44-2021 (Rev. E)